

Maverick Wind Sensor Programming Guide

Wind Sensor • Quick Reference Card

MAVERICK

1 Pair Wind Sensor to a Channel

- 1 On the remote, select the channel assigned to the screen you're configuring
- 2 Hold Stop for 5 seconds on the remote — the motor jogs up/down to confirm
- 3 Press Join on the wind sensor — the motor jogs up/down to confirm

✓ Wind sensor is now paired to that channel

2 Reverse Operating Direction

- 1 Press the Wind and Sun buttons together — the screen displays UP or DN
- 2 Select the direction you want by pressing the matching button

To reverse again later, repeat this step and choose the opposite option

■ Symbol & Button Reference

WIND	Wind button	Adjusts sensitivity 1 level per press
SUN	Sun button	Adjusts sensitivity 1 level per press
JOIN	Join (on sensor)	Pairs sensor to selected channel

3 Set Wind Sensitivity Level

Pressing the Wind or Sun button changes the sensor's sensitivity by one level per press

Level 0 = sensor is ON

Wind Speed by Level

1	Level	~7 mph (10.8 km/h)
2	Level	~11 mph (18 km/h)
3	Level	~16 mph (25.2 km/h)
4	Level	~20 mph (32.4 km/h)
5	Level	~25 mph (39.6 km/h)
6	Level	~31 mph (50.4 km/h)
7	Level	~45 mph (72 km/h)
8	Level	~69 mph (111.6 km/h)
9	Level	~130 mph (208.8 km/h)

